


Energy Monitoring Dashboard

User Manual

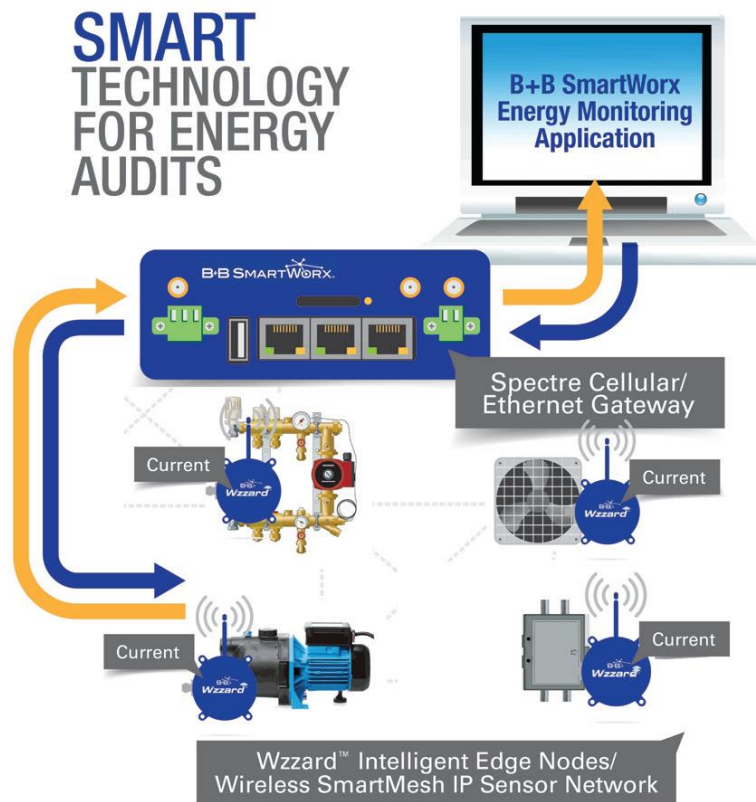

ADVANTECH

B+B
SMARTWORX



USA

Advantech B+B SmartWorx
707 Dayton Road
Ottawa, IL 61350 USA

Phone (815) 433-5100 -- **General Fax** (815) 433-5105

Website: www.advantech-bb.com
support@advantech-bb.com

Europe

Advantech B+B SmartWorx
Westlink Commercial Park
Oranmore, Co. Galway, Ireland

Phone +353 91-792444 -- **Fax** +353 91-792445

Document: APP-BNRG_Wzzard_Energy_Monitoring_Dashboard_R2_1316m

CONTENTS OF PACKAGE

The APP-BNRG package includes:

- B+B SmartWorx USB Flash Drive
- Quick Start Guide

The WSKIT3BE-NRG or WSKIT3BC-NRG kit includes

- | | | |
|---------|---------------------|--|
| • Qty 3 | WSD2MA3 | 3 Analog in units with M12 connector and external antenna |
| • Qty 6 | JC10F50-V | 50A clamp on current sensor |
| • Qty 2 | JC24S250-V | 250A clamp on current sensor |
| • Qty 3 | 520-10256-00 | M12 Cables |
| • Qty 1 | ERT-351 or RT3G-350 | Ethernet or Cellular Gateway with Dust Manager board |
| • Qty 1 | APP-BNRG | USB flash drive (2GB) with B-Scada dashboard and User Manual |

SOFTWARE

B+B's Wzzard Energy Monitoring Platform featuring:

- Support for 1-32 nodes with 1-3 sensors per node
- Real time data display, selectable between Amps, KW, dollar cost
- Historical function
- User programmable high/low limits for email/SMS alerts
- Ability to export data

ABOUT THE ENERGY MONITORING DASHBOARD

The Wzzard™ Energy Monitoring Application Bundle makes it simple to see the real time and historical electrical consumption of any individual machine or panel. Data can be exported for further analysis. Email or text message alerts can be sent when user-configured high or low limits are exceeded in critical applications. Installation costs are kept low using the Wzzard wireless sensing platform. The platform creates a self-forming, self-healing wireless mesh network that eliminates the need for wires and requires no special skills to install. Each Wzzard sensor node is powered by long life batteries.

Install the monitoring software on your Windows PC. You can monitor the energy dashboard on that machine, or configure it to serve web pages that you can monitor from any web browser on your network.

DASHBOARD INSTALLATION

To install the dashboard:

Pre Requisite:

Windows PC with one of the following Operating Systems:

Windows 7 32 or 64-bit *
windows 8.1 32 or 64-bit
Windows 10 32 or 64-bit

The software will look for Microsoft .NET Framework 4.5 or higher and if not present, it will be installed.

*Note: If you want to access the dashboard from other devices using a web browser, it is suggested not to use Windows 7. Before proceeding, see Appendix A for setup

1. Insert the B+B USB flash drive into your PC. Open the Removable drive via Windows Explorer.
2. Select the **install.cmd** file, right click and select **Run as administrator**.
3. Click **Yes** on the User Account Control Dialog
4. Press any key to continue the installation on the command window or press CTRL-C or CTRL-Break to exit the install.
5. See Figure 1, which shows the steps which are part of the install process.


```
Administrator: Install B+B Dashboard
This will install the B+B Dashboard.
Press CTRL-C or CTRL-BREAK to exit, or any other key to continue.
Press any key to continue . . .
Look for Microsoft .NET Framework v4.5.
Installing B-Scada...
Renaming Mimic Runtime...
Configure B-Scada...
Add B+B Dashboard...
Stopping B-Scada Services...
Restarting B-Scada Services...
Success.
Press any key to continue . . .
```


Figure 1: Install B+B Dashboard

6. The Wzzard Monitor Short cut will appear on your desktop once the install has been completed.

RUNNING DASHBOARD

To run the Dashboard:

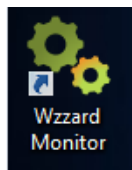

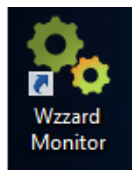1. Double click the  shortcut on your Desktop
2. The main page of the dashboard is displayed. The main page allows you to do the following:
 - a. View the real-time reading/status of each assigned node analog sensor.
 - b. Configure the Units being displayed, in Amps, kw, or \$/hr by clicking the corresponding button.
 - c. View Hidden Nodes
 - d. View Unassigned Nodes
 - e. View the Status of the Node
 - o Displays the current readings
 - o Displays alarm status
 - Red motor indicates a red alert
 - Yellow motor indicates a yellow alert
 - Green motor indicates no active alerts
 - o Indicates a node has stale data
 - f. Modify the Node Configuration
 - g. Modify the System Configuration
 - o If the gateway/broker IP address has changed from the default, this must be set on the System Configuration screen in order to see the nodes

- h. Switch between the Summary and Detailed Views
- i. Manage Nodes
- j. Refresh the screen

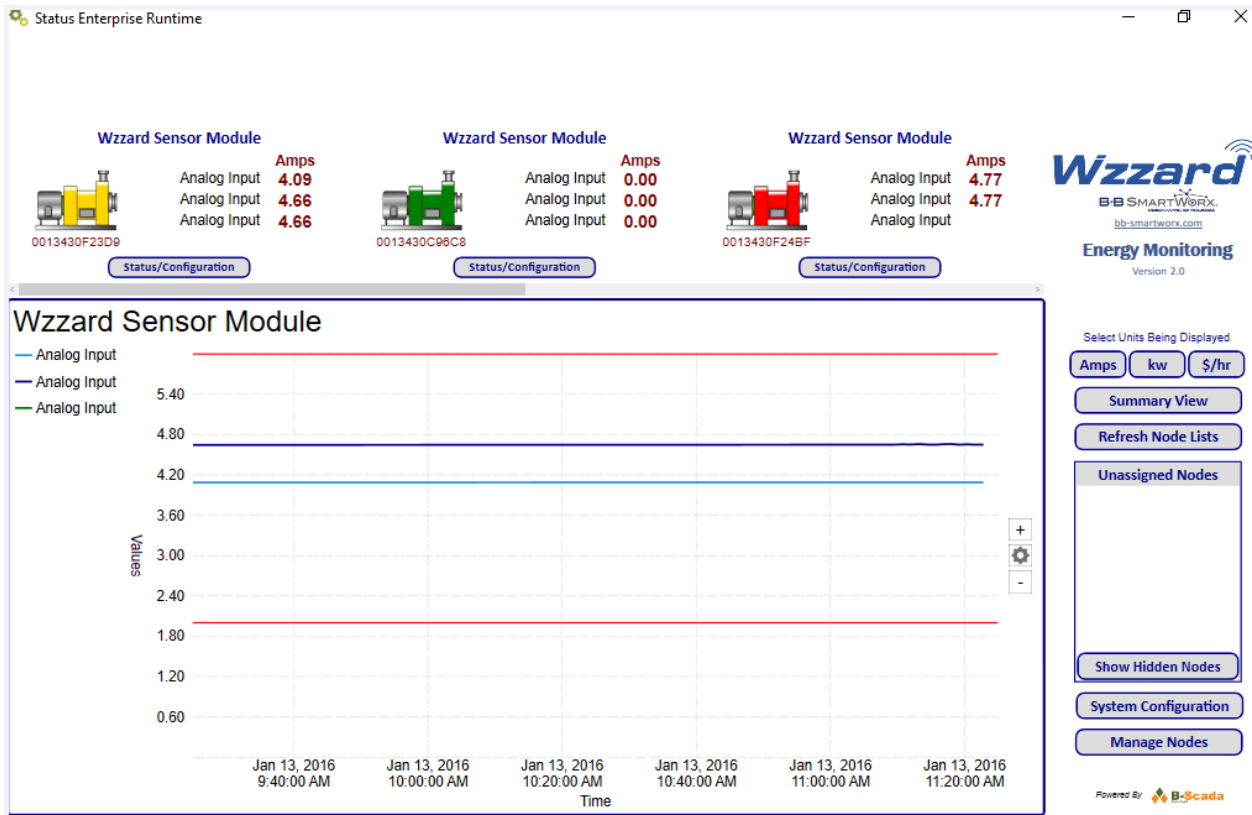


Figure 2: Main Page (Detailed View) with assigned nodes and alerts

SYSTEM CONFIGURATION

The System Configuration screen allows you to set the broker IP address, the kw/hour rate, and the email address and SMTP server settings for sending email alerts.

Click the **System Configuration** Button on the Main screen

System Configuration

Application Settings

kw/hour rate (\$) **0.08**

Data Provider Settings

Broker IP Address **192.168.1.1** **Activate**

Alert Settings - Email & SMTP Server

Email Address

SMTP Username

SMTP Password

SMTP Server

SMTP Port **587**

SMTP Enable SSL

Activate SMTP Settings

Done

Figure 3: System Configuration

If your gateway was setup on a network or is not using the default IP Address of **192.168.1.1**, then set the **Broker IP Address** and click the **Activate** button. Once it is done activating, click the **Done** button to return to the main page.

Enter the **kw/hour rate (\$)** that is being charged for your electrical service. This is used in the calculation when the \$/hr units are being displayed on the main page.

If you want to receive alert emails, set the following:

- Set **Alert Email Address** to the email that you would like the alert to go to. This could be an email or text address
- Set **SMTP Username** to your email address (e.g. example@gmail.com)
- Set **SMTP Password** to your email password (e.g. 16-character password which was previously generated)
- Set **SMTP Server** to your email server (e.g. smtp.gmail.com)
- Click **Activate SMTP Settings**
- Press the **Done** button to return to the main page

Note: It is recommended to set up a separate account for sending alerts. The document assumes that a Gmail SMTP account will be used. This account must enable **2 Step Verification** and have an app password generated.

To set up **2 Step Verification**, follow these steps:

1. Sign in to [My Account](#).
2. In the **Sign-in & Security** section, select **Signing in to Google**.
3. Choose **2-Step Verification**. This will bring you to the [2-Step Verification settings page](#).
4. You will then see a step-by-step guide which will help you through the setup process.

Next you will need to generate an app password.

1. Visit your [App passwords](#) page. You may be asked to sign in to your Google Account.
2. At the bottom, click **Select app** and choose the app you're using.
3. Click **Select device** and choose the device you're using.
4. Select **Generate**.
5. Follow the instructions to enter the App password (the 16 character code in the yellow bar) on your device.
6. Select **Done**.

Once you are finished, you won't see that App password code again. However, you will see a list of apps and devices you've created App passwords for.

If you want to receive alerts via text message on your mobile device, you can set the **Alert Email Address** to a provider based address. Below is a list of the commonly used provider addresses. Check with your mobile service provider for updated addresses.

Alltel Wireless	mobile-number@message.Alltel.com (SMS & MMS) mobile-number@text.wireless.alltel.com (SMS) mobile-number@mms.alltel.net (MMS)
AT&T Wireless	mobile-number@txt.att.net (SMS) mobile-number@mms.att.net (MMS)
AT&T Mobility (formerly Cingular)	mobile-number@cingularme.com mobile-number@mobile.mycingular.com
Boost Mobile	mobile-number@myboostmobile.com
Cricket	mobile-number@sms.mycricket.com (SMS) mobile-number@mms.mycricket.com (MMS)
Metro PCS	mobile-number@mymetropcs.com
Sprint (PCS)	mobile-number@messaging.sprintpcs.com (SMS) mobile-number@pm.sprint.com (MMS)
Sprint (Nextel)	mobile-number@page.nextel.com (SMS) mobile-number@messaging.nextel.com (Rich Messaging)
Straight Talk	mobile-number@VTEXT.COM (SMS) mobile-number@vtext.com

	number@mypixmessages.com (MMS)
T-Mobile	mobile-number@tmomail.net (MMS)
U.S. Cellular	mobile-number@email.uscc.net (SMS) mobile-number@mms.uscc.net (MMS)
Verizon	mobile-number@vtext.com (SMS) mobile-number@vzwpix.com (MMS)
Virgin Mobile	mobile-number@vmobl.com (SMS) mobile-number@vmpix.com (MMS)
Esendex (AU,ES,FR,IE,UK)	mobile-number@esendex.net
MobileMail.RU	mobile-number@mobilemail.ru

Table 1: Commonly used provider addresses

CONFIGURE UNASSIGNED OR HIDDEN NODES

All Unassigned Nodes are located in the **Unassigned Nodes** list box. All nodes on your network will appear in the **Unassigned Node** list. You can assign, hide or delete a node.

To configure an Unassigned Node, click it.

- Click **Assign Node** to assign the node. Once a node is in the assigned state, the node will start to display its sensor readings on the Dashboards main page
- Click **Hide Node** to hide the node. You might hide a node because you don't want to monitor it. Once the node is in the hidden state, the node no longer appears in the unassigned node list. You can click the **Show Hidden Nodes** to view them.
- Click **Delete Node** to delete the node. If you want to delete a node, its best to remove it from your network. *To remove a node from the **Unassigned Node** list, hide it.

All Hidden Nodes are located in the **Hidden Nodes** list box. You can assign or delete a node.

To configure a Hidden Node, click it.

- Click **Assign Node** to assign the node. Once a node is in the assigned state, the node will start to display its sensor readings on the Dashboards main page.
- Click **Delete Node** to delete the node. If you want to delete a node, it is best to remove it from your network. *To remove a node from the **Unassigned Node** list, hide it.

MANAGE NODES

If you click the **Manage Nodes** button, it will allow the user to delete all nodes (unassigned, assigned, and hidden). There is also an option to delete one assigned node at a time. Once the assigned node is deleted, it will reappear in the unassigned nodes list if the node is still being reported by the broker.

ASSIGNED NODE STATUS, TREND, AND CONFIGURATION

By default the dashboard is in the Detailed View mode. This mode only shows the first 6 nodes the user has assigned. In this mode, the user can click on a node to view its trend chart, or click the Status/Configuration button to see only the specified node and its configuration. See Figure 2. To view the node's status in the detailed view, select the Status/Configuration button under the specific node then click Configure button.

The dashboard also offers a Summary View. This view is good for users to visually see all of their assigned nodes especially if there are more than 3 nodes on your network. Figure 4 shows the Summary View. To configure the nodes in this view, click the node and then click the Configure button.

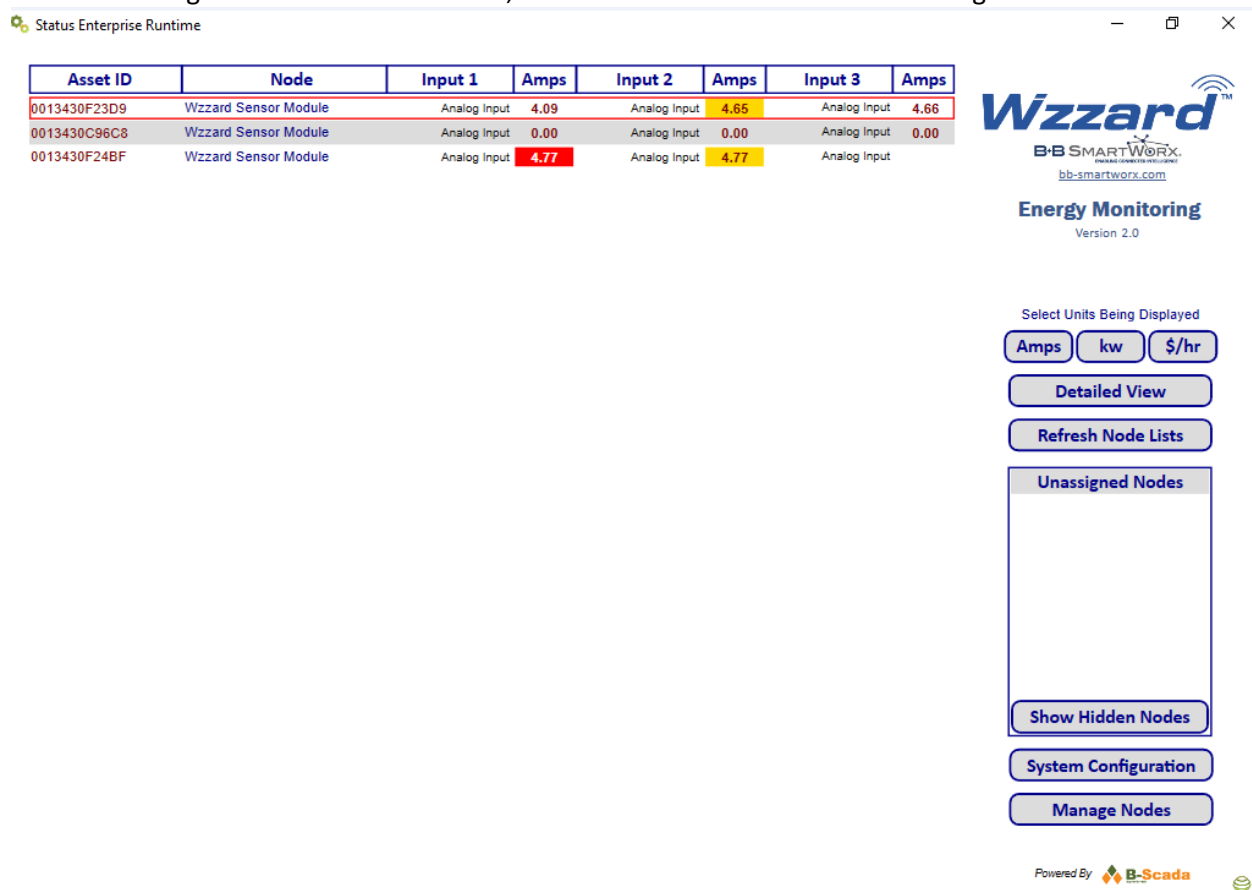


Figure 4: Main Page (Summary View) with assigned nodes

Figure 5 shows the current readings of the Analog Inputs, the Internal Temperature and the Supply Voltage. In the center of the screen it lists the BLE MAC address of the unit as well as the Node Description if it exists. The trend chart displays the data based on the published data.

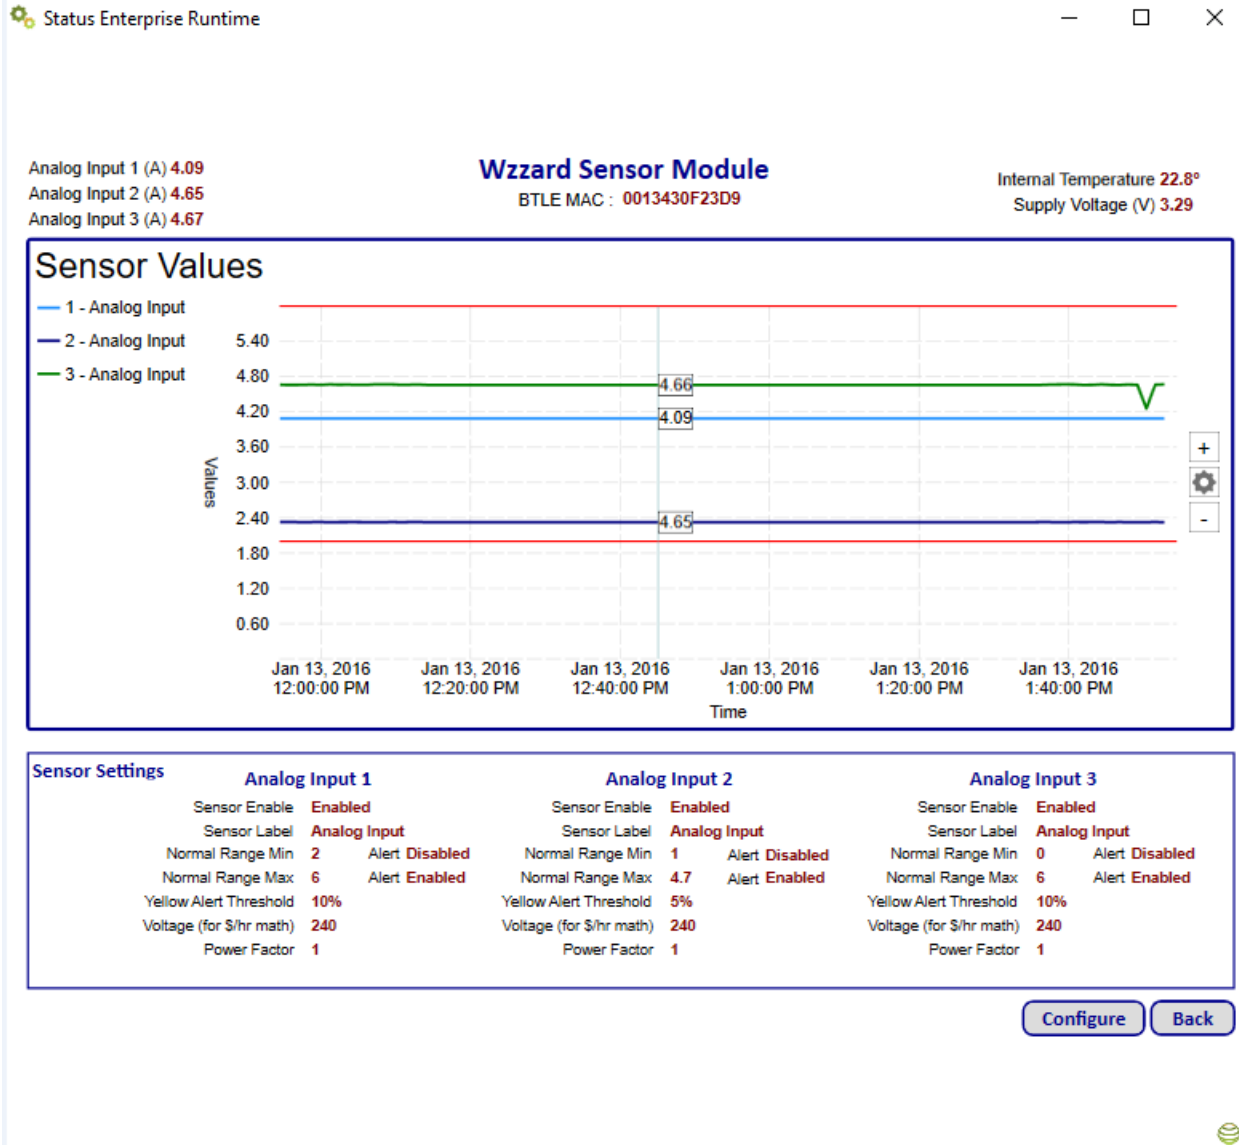




Figure 5: Node Status and Configuration

The sensor settings are configurable by clicking the **Configure** button. See the *Configure Assigned Nodes* section for more detail.

The chart displays the historical data based on the published data. Click the  icon to edit the Duration and Grid Frequency. The trend chart settings dialog, seen in Figure 6, gives you the ability to export data in .CSV format. Click the  icon to close the trend chart settings.

Use the  button to zoom in or the  button to zoom out of the trend chart.

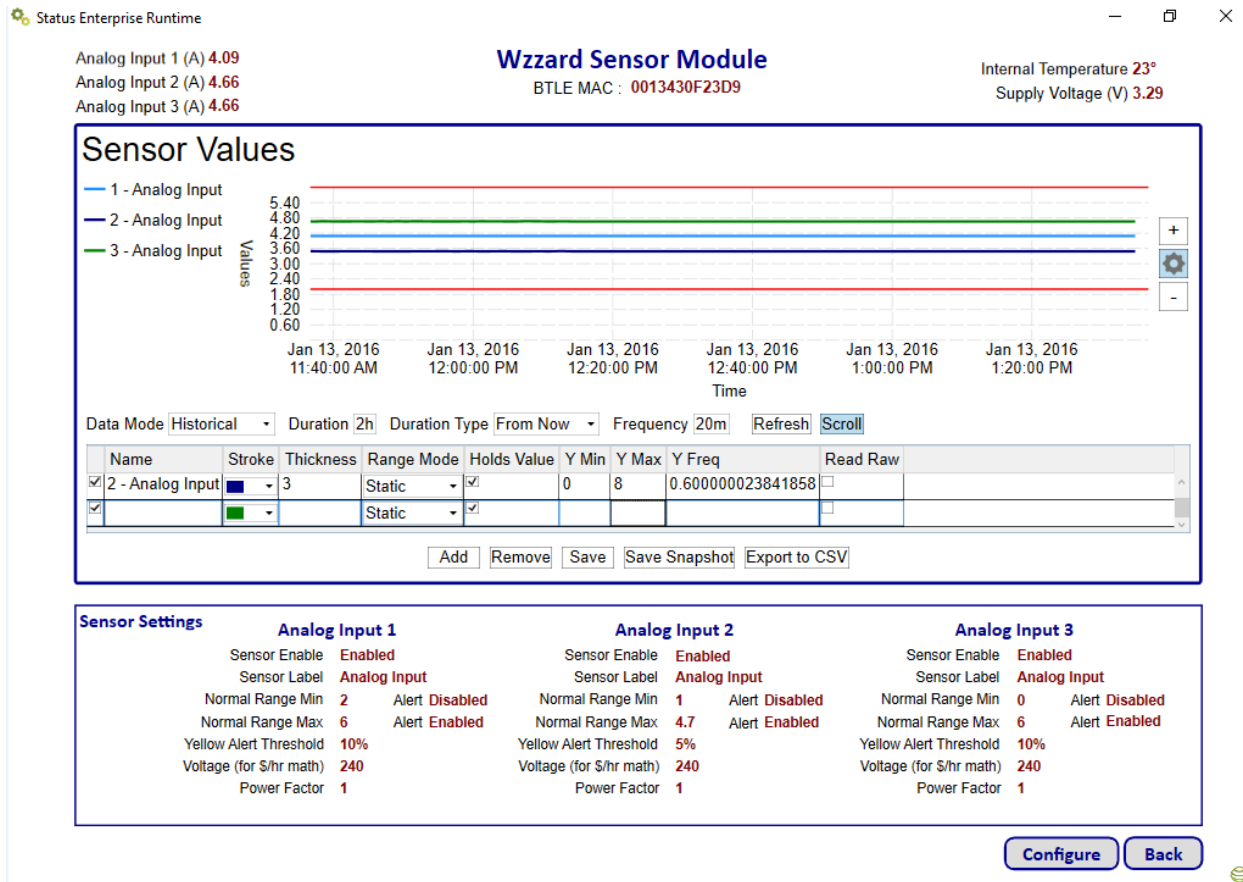


Figure 6: Trend Chart Settings

Note: Web Client screens may have a slightly different appearance.

CONFIGURE ASSIGNED NODES

The following describes the assigned node and input configuration settings.

Status Enterprise Runtime — □ ×

Wzzard Sensor Module

BTLE MAC : 0013430F24BF

Node Configuration

Node Name/Description **Wzzard Sensor Module**

Stale Period **0** hours *Alert occurs if the Sensor hasn't reported within this time period.
0 minutes

Trend Chart Y-Axis Min **0**
 Y-Axis Max **100**

Input Configuration

Analog Input 1 Input Enabled

Sensor Label **Analog Input** Voltage (for \$/hr math) **240**

Normal Range Min **0** Alert Enabled Power Factor **1**

Normal Range Max **10** Alert Enabled

Yellow Alert Threshold (%) **80**

Analog Input 2 Input Enabled

Sensor Label **Analog Input** Voltage (for \$/hr math) **240**

Normal Range Min **0** Alert Enabled Power Factor **1**

Normal Range Max **80** Alert Enabled

Yellow Alert Threshold (%) **10**

Analog Input 3 Input Enabled

Sensor Label **Analog Input** Voltage (for \$/hr math) **240**

Normal Range Min **0** Alert Enabled Power Factor **1**

Normal Range Max **80** Alert Enabled

Yellow Alert Threshold (%) **10**

Done

Figure 7: Configure Assigned Node

Node Configuration	
Node Name/ Description	A text field which gives the user the ability to set a description of the node
Stale Period	A visual alert will occur on the main page if the sensor hasn't reported within the set time period Note: this must be set to a value other than 0 if the user wants a visual indication that their data is stale. The last published reading appears in gray text when the data is stale.
Trend Chart Y Axis Min and Max	Allows the user to modify the scale of the Y Axis on the trend chart

For each Analog sensor, the user can set the following:

Input Configuration	
Input Enabled	Allows the user to enable or disable the sensor
Sensor Label	A text field which gives the user the ability to set a label for the input
Normal Range Min	Allows the user to set the normal minimum range
Normal Range Max	Allows the user to set the normal maximum range
Alert Enabled (Min/Max)	Enable or disable the visual and email alerts for the related min and max range values
Yellow Alert Threshold (%)	Allows the user to set the threshold for the yellow alert. The yellow alert threshold is x% of the Normal Range Min and Max values. Note yellow Alerts only alert the user via the dashboard, An email or text message does not get sent.
Voltage (for \$/hr math)	This is used in the calculation for the displayed units on the main page
Power Factor	This is used in the calculation for the displayed units on the main page

Click the **Done** button when completed.

UNINSTALLING DASHBOARD

To uninstall the dashboard follow these instructions:

1. Close all Dashboard Clients
2. Insert the B+B USB memory stick into your PC. Open the **Removable Drive** via Windows Explorer.
3. Select the **uninstall.cmd** file, right click and select **Run as administrator**
4. Click **Yes** on the User Account Control Dialog
5. Press any key to continue the installation on the command window
6. See Figure 8, which shows the steps in which are part of the uninstall process.

```
Administrator: Delete B+B Dashboard
This will uninstall the B+B Dashboard and delete all related files.
Press CTRL-C or CTRL-BREAK to exit, or any other key to continue.
Press any key to continue . . .
Stopping B-Scada services...
Uninstalling B-Scada...
Deleting B-Scada Program Files...
Deleting B-Scada ProgramData...
Success.
Press any key to continue . . .
```

Figure 8: Uninstall Dashboard


APPENDIX A: SET UP IIS WEB SERVER

If you would like to run a web client, perform these steps:

1. Uninstall the Dashboard if you have already installed it. Follow the Uninstalled Dashboard Section. One must enable IIS prior to installing the dashboard.

WARNING: Uninstalling the Dashboard will remove any historical data the system has stored.

2. Open Windows Control Panel
3. Click the "Programs and Features" icon
4. In the left hand navigation pane, select "Turn Windows features on or off"
5. Expand the "Internet Information Services" feature and turn on the following circled features
6. Click **OK**
7. Follow the directions in the Dashboard Installation section to install the Dashboard.

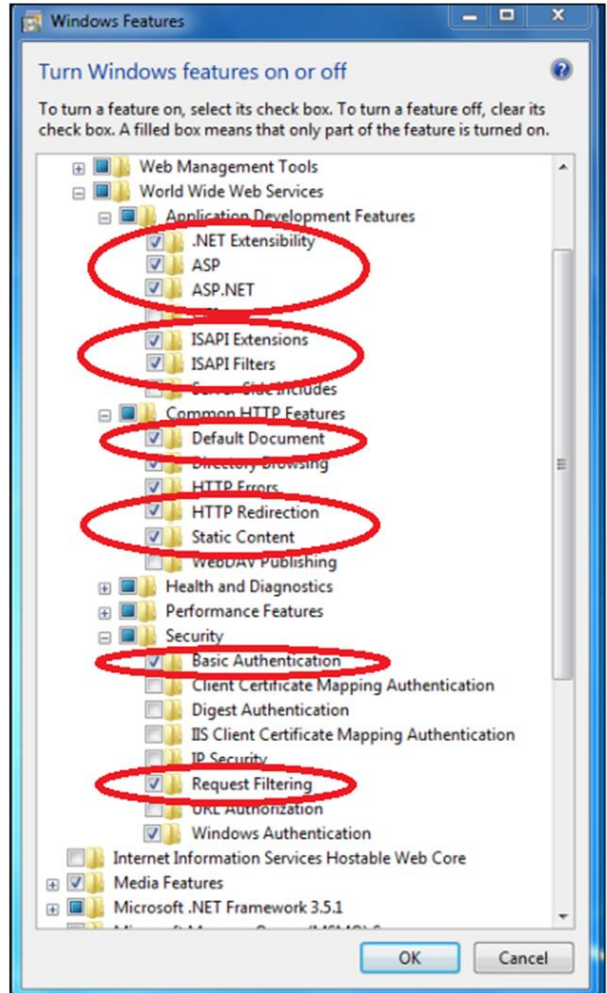

8. To allow remote access to the web client, select the 'Firewall_Setup.cmd' file, right click and select 'Run as administrator' after the Dashboard installation is complete.

The following Internet Browsers were tested and recommended:

Chrome Version 43.0.x

Mozilla Firefox Version 38.0.x

Internet Explorer 11.0.x

Use the following URL to access the Dashboard via a web client:

From installed PC <http://localhost/StatusEnterpriseGateway>

From a networked PC <http://<IP address>/StatusEnterpriseGateway>

Note: Only one web client can be logged in at a time.

APPENDIX B: DATABASE MAINTENANCE

To improve response times, the dashboard database should be periodically backed up and renewed.


To **back up** your database, follow these steps:

1. Close all Dashboard Clients
2. Open Windows Explorer and go to C:\ProgramData\BScada\StatusEnterprise
3. Copy the 'StatusEnterprise.db3' file to a Backup folder
4. Append a **.bak** to this file

To **clean up and renew** your database, follow these steps:

5. Run the Database Utility App, found in the following location of the PC: Start -> All Programs -> B-Scada Enterprise Edition -> Status Enterprise -> Database Utility and right click and select Run as administrator.
6. Click **Yes** on the User Account Control
7. Browse to the database C:\ProgramData\BScada\StatusEnterprise\StatusEnterprise.db3
8. Click **Connect**
9. Set Destination File Browse to the Backup folder and type StatusEnterprise.db3
10. Click Save
11. Click **Renew DB**
12. Click **Backup**
13. Once the backup has completed, close the Database Utility
14. Copy the new file located in the Backup folder to the original file location C:\ProgramData\BScada\StatusEnterprise

When prompted to provide administrator permission, click **Continue**

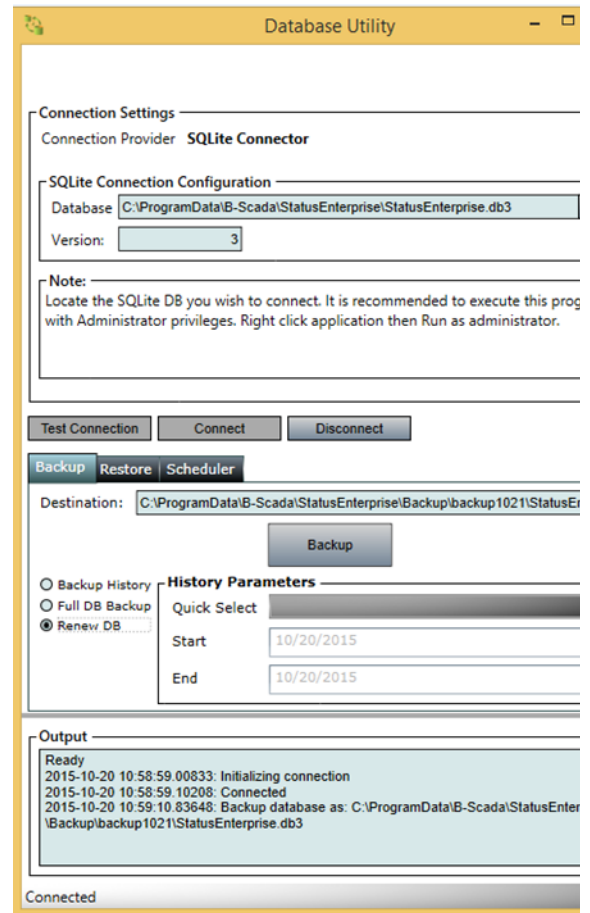

ADVANTECH B+B SMARTWORX TECHNICAL SUPPORT

Phone: **1-800-346-3119**
 (Monday - Friday, 7 a.m. to 5:30 p.m. CST)

Fax: **815-433-5109**

Email: support@advantech-bb.com

Web: www.advantech-bb.com